

EQUERRY® pro

QUICK GUIDE & INSTRUCTIONS



ALL-IN-ONE
SHOE POLISHING
SYSTEM

APPLY

To dispense the shoe cream, position the sponge on the face of the leather and push down.

Dispense the shoe cream evenly through the soft sponge onto each shoe, nourishing the leather.



SHINE

Polish to a brilliant shine using the motorised horsehair brush.

Press the "on" symbol to start the horsehair brush rotating. Gently move the horsehair brush across the shoe surface to achieve the desired shine.

CHARGE

Charge the motorised horsehair brush via USB. Insert the USB-C connector into the horsehair brush socket and connect the other end to a powered USB outlet.



One full charge takes approximately 30 minutes and lasts for approximately 10 pairs of shoes.

First use: A small level of charge should be available for you to use your Equerry Pro immediately.



**USB Cable included.
(Power adapter required.)**

REPLACE

Shoe cream cartridges and horsehair brushes can be easily replaced.

Shoe Cream Cartridge.

Simply pull the cartridge out from the main housing and replace with the new cartridge.

Horsehair Brush.

Simply pull the horsehair brush out from the main housing and replace with the new unit.

Replacement brushes and creams can be purchased from our website:

www.equerryshine.com

IMPORTANT

Consider the operation manual as part of the product and store it in a safe and accessible place. Include this operation manual if passing the appliance on to a third party. Use this appliance only for its intended purpose. Before using the appliance for the first time, you must read and understand the operation manual completely.

In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

EQUERRY®
pro

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of 12 months from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Equerry who will repair any such defect or elect to replace the product or any part of it, without charge, provided that there is proof of purchase.

Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee does not include consumable parts. This guarantee in no way affects your rights under statutory law in the United Kingdom.

CUSTOMER SERVICES

Equerry Pro.

Lambert & Barclay Ltd.
2 Tower House, Hoddesdon,
Hertfordshire, EN11 8UR, UK.
Telephone: +44 (0) 345 055 9472
Email: hello@equerryshine.co.uk

HAZARDS

 **Danger: Electric shock due to damage to appliance.**

Do not operate the appliance if it malfunctions or is dropped or damaged in any way. Any servicing or repair must be performed by Lambert & Barclay Ltd. Do not take into the bathroom.

 **Danger of explosion.**

The rechargeable lithium battery should not be disposed of in the household waste. Dispose of it in a completely discharged state in accordance with local regulations. Do not throw it into a fire where it could be ruptured.

 **Warning: Injuries due to incorrect handling.**

Switch off the appliance when not in use, before putting on or taking off attachments and also before cleaning the appliance.

 **Caution: Danger of product damage.**

Do not use outdoors if weather conditions are poor or in damp areas. Do not drop or insert any object into any opening.

 **DISPOSAL**

Adhere to the relevant legal requirements when disposing of the appliance.